

Button on wheel	PS3	PS4	Xbox One	PC(X-INPUT)	PC(D-INPUT)	SWITCH
A (Action button)	X	X	A	A	3	B
B (Action button)	○	○	B	B	2	A
X (Action button)	□	□	X	X	4	Y
Y (Action button)	△	△	Y	Y	1	X
R1	R1	R1	RB	RB	6	R
L1	L1	L1	LB	LB	5	L
R2	R2	R2	RT	RT	8	ZR
L2	L2	L2	LT	LT	7	ZL
R3	R3	R3	SR	SR	12	R3
L3	L3	L3	SL	SL	11	L3
Cross	UP	UP	UP	UP	UP	UP
	DOWN	DOWN	DOWN	DOWN	DOWN	DOWN
	LEFT	LEFT	LEFT	LEFT	LEFT	LEFT
	RIGHT	RIGHT	RIGHT	RIGHT	RIGHT	RIGHT
Options	START	OPTIONS	Menu	START	10	+
Share	SELECT	SHARE	View	BACK	9	-
Left paddle	L2	L1	LB	LB	14	L
Right paddle	R2	R1	RB	RB	15	R
Left pedal	□	L2	LT	LT	RZ	B
Right pedal	X	R2	RT	RT	Z	A
Mode	MODE	MODE	X-Guide	X-Guide	13	HOME
PROG button	Programming	Programming	Programming	Programming	Programming	Programming

